






INSTALLATION INSTRUCTIONS OF BEACONS

Wiring Instrucion For Bolts Mounting Verson

| | | |
|------------------------|---|--|
| Positive VDC |  | Red (12V DC or 24V DC only) |
| Negative Ground |  | Black |
| Flash Pattern and SYNC |  | Yellow (Momentarily touch for next pattern, touch for 5 second go back to first pattern) |
| Asynchronous |  | Green |


Synchronized Flash Setting

1. Connect all the **Yellow** wires together, and touch the **Yellow** wires to the postive for 5 seconds, and then all the lights will go back to the first flash pattern and will flash in SYNC.
2. Momentarily touch the **Yellow** wires to the positive for next pattern.

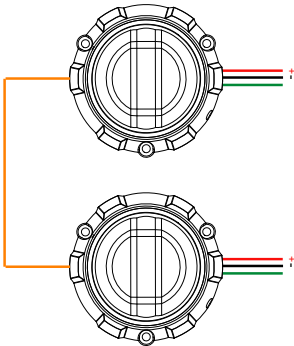


Asynchronous Flash Setting

1. Connect all the **Yellow** wires together, and touch the **Yellow** wires to the postive for 5 seconds, and then all the lights will go back to the first flash pattern and will flash in SYNC.
2. Momentarily touch the **Yellow** wires to the positive for next pattern.
3. Connect all the **Green** wires of all the lights you want to be asynchronous to the positive +, and the lights will flash asynchronously.

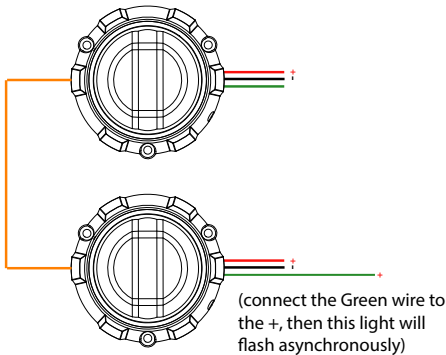


Bolts Mounting:

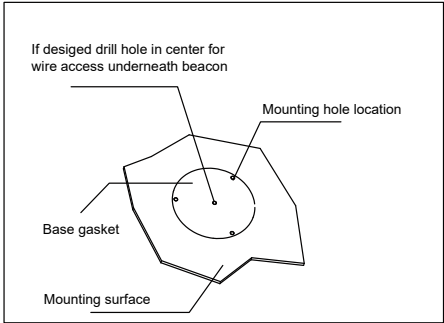

Magnet Mounting:

It comes complete with a magnet, a 3 meter cord and a cigarette lighter plug.

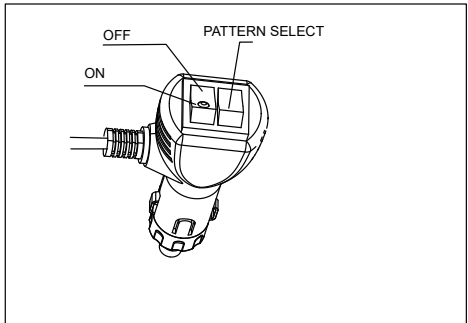

Flash Patterns

| | | FPM | MS | |
|----|--------------------------------|----------|---------------|--------|
| 1 | Single Flash (100% brightness) | 150 | 400MS | 1 闪 |
| 2 | Single Flash (50% brightness) | 150 | 400MS | 1 闪 |
| 3 | Double Flash (100% brightness) | 150 | 400MS | 2 闪 |
| 4 | Double Flash (50% brightness) | 150 | 400MS | 2 闪 |
| 5 | Slow Single Flash | 75 | 800MS | 1 闪(慢) |
| 6 | Triple Flash | 120 | 500MS | 3 闪 |
| 7 | Quadruple Flash | 120 | 500MS | 4 闪 |
| 8 | Quintuple Flash | 120 | 500MS | 5 闪 |
| 9 | Rotation | 180 / 90 | 333MS / 666MS | 旋转 |
| 10 | Quintuple Flash | 61 | 990MS | 5 闪(慢) |
| 11 | Strobe Flash | 600 | 100MS | 爆 闪 |
| 12 | Cruise (30% Brightness) | | | 巡航 |

★ FPM means how many cycles in a minute



- Only a qualified auto-electrician should install this product. Do Not install this product if unsure.
- Failure to use specified installation parts or hardware will void the product warranty.
- For this product to operate at optimum efficiency, a good electrical connection to ground must be made.
- Do not install and/or operate this safety product unless you have read and understand the safety information contained in this manual.

IMPORTANT! THIS UNIT IS A SAFETY DEVICE, AND IT MUST BE CONNECTED TO ITS OWN SEPARATE, FUSED POWER POINT TO ASSURE ITS CONTINUED OPERATION WHEN ANY OTHER ELECTRICAL ACCESSORY FAIL.