

INSTRUCTION

L3-180-51210-A4

Wiring Instruciton

Warning Light Color 1	Red	(+)
Warning Light Color 2	Blue	(+)
Scene Light	White	(+)
Flash Pattern and SYNC	Yellow	(+) Momentarily touch + for next pattern
Asynchronous	Green	(+)
Negative Ground	Black	(-)


★ Connect the Yellow wire to positive will be Cruise Light as well, touch for 5 second go back to first pattern

Flash Patterns

★ FPM means how many cycles in a minute

NO.	PATTERNS.	FPM	MS
1	Single Flash (100% brightness)	150	400
2	Single Flash (50% brightness)	150	400
3	Double Flash (100% brightness)	150	400
4	Double Flash (50% brightness)	150	400
5	Slow Single Flash	75	800
6	Triple Flash	120	498
7	Quadruple Flash	120	498
8	Quintuple Flash	78	765
9	Single + Double	66	910
10	Single + Triple	61	990
11	Single + Quintuple	49	1230
12	Strobe Flash	600	100
13	Cruise (30% Brightness)		


Size

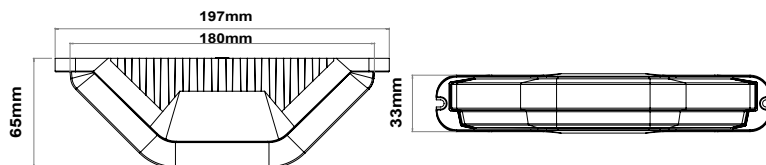

- Only a qualified auto-electrician should install this product. Do Not install this product if unsure.
- Failure to use specified installation parts or hardware will void the product warranty.
- For this product to operate at optimum efficiency, a good electrical connection to ground must be made. Do not install and/or operate this safety product unless you have read and understand the safety information contained in this manual.


Synchronized Flash Setting

1. Connect all the **Yellow** wires together, and touch the **Yellow** wires to the postive for 5 seconds, and then all the lights will go back to the first flash pattern and will flash in SYNC.
2. Momentarily touch the **Yellow** wires to the positive for next pattern.

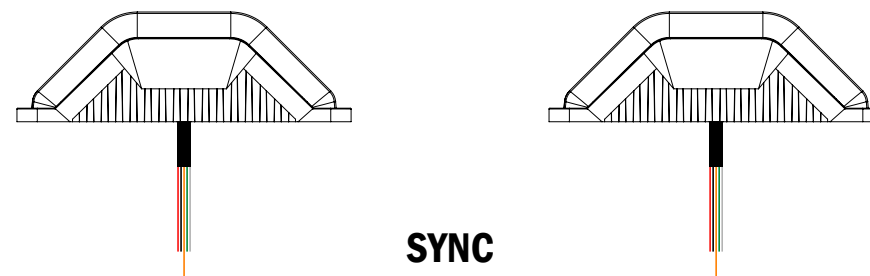


Asynchronous Flash Setting

1. Connect all the **Yellow** wires together, and touch the **Yellow** wires to the postive for 5 seconds, and then all the lights will go back to the first flash pattern and will flash in SYNC.
2. Momentarily touch the **Yellow** wires to the positive for next pattern.
3. Connect the **Green** wires of the lights you want to be asynchronous to the positive +, and those lights will flash asynchronously.

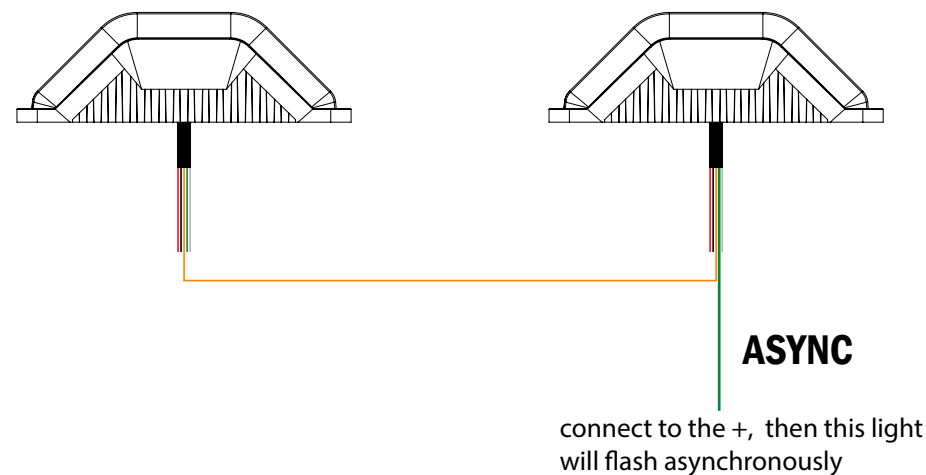


IMPORTANT! THIS UNIT IS A SAFETY DEVICE, AND IT MUST BE CONNECTED TO ITS OWN SEPARATE, FUSED POWER POINT TO ASSURE ITS CONTINUED OPERATION WHEN ANY OTHER ELECTRICAL ACCESSORY FAIL.

	Frist level:  Amber Strobe Second level:  White beam Scene Light	25cm cable (5 cores)	Screw Mount
	Frist level:  Blue Strobe Second level:  White beam Scene Light	25cm cable (5 cores)	Screw Mount
	Frist level:  Blue Strobe Second level:  White beam Scene Light	25cm cable (5 cores)	Screw Mount
	Frist level:   Amber + White Strobe Second level:  White beam Scene Light	25cm cable (6 cores)	Screw Mount
	Frist level:   Amber + Blue Strobe Second level:  White beam Scene Light	25cm cable (6 cores)	Screw Mount
	Frist level:   Red + Blue Strobe Second level:  White beam Scene Light	25cm cable (6 cores)	Screw Mount
	L Bracket Mount		

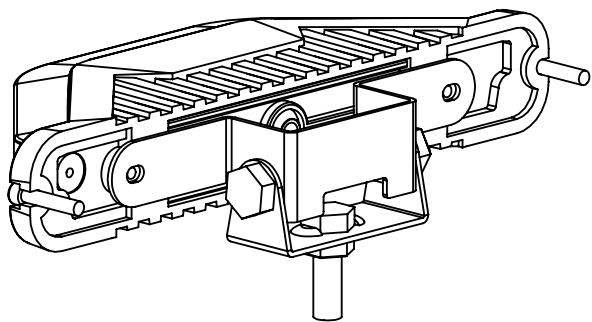

U bracket Mount

Warning Light Mode

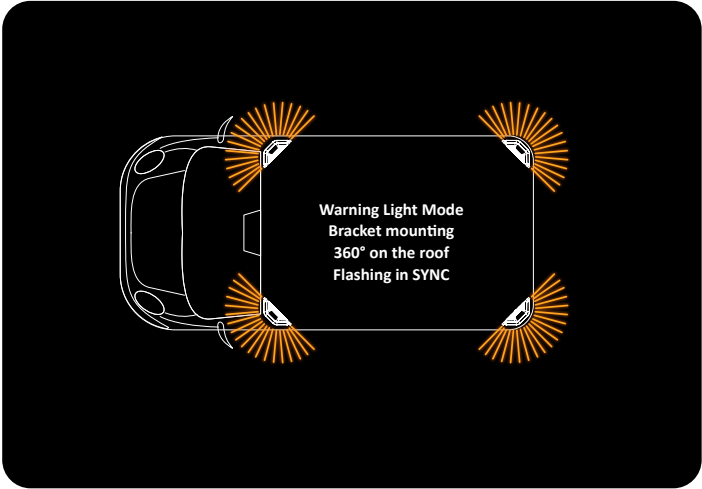

Scene Light Mode

