

INSTRUCTION

LH2-60224-A4

Wiring Instruction


Warning Light	Red	Red (+)
Puddle Light	Blue	Blue (+)
Alley Light	White	White (+)
Flash Pattern and SYNC	Yellow	Yellow (+) Momentarily touch + for next pattern
Asynchronous	Green	Green (+)
Negative Ground	Black	Black (-)

- Connect the Yellow cable for 5 second go back to first pattern.
- If it is a dual color version, then the Blue cable will be warning Light color 2, Puddle light will be controlled by White cable with Alley light together.
- Warning lights override Alley Light which means means when the warning light and alley light are both connected, only the warning light is on.

Flash Patterns


★ FPM means how many cycles in a minute

NO.	PATTERNS.	FPM	MS
1	Single Flash (100% brightness)	150	400
2	Single Flash (50% brightness)	150	400
3	Double Flash (100% brightness)	150	400
4	Double Flash (50% brightness)	150	400
5	Slow Single Flash	75	800
6	Triple Flash	120	498
7	Quadruple Flash	120	498
8	Quintuple Flash	78	765
9	Single + Double	66	910
10	Single + Triple	61	990
11	Single + Quintuple	49	1230
12	Strobe Flash	600	100
13	Cruise (30% Brightness)		

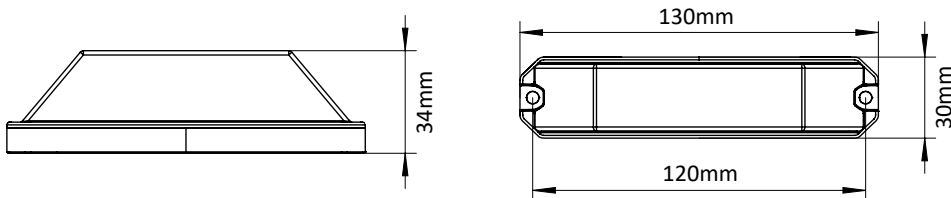


Synchronized Flash Setting

1. Connect all the **Yellow** wires together, and touch the **Yellow** wires to the positive for 5 seconds, and then all the lights will go back to the first flash pattern and will flash in SYNC.
2. Momentarily touch the **Yellow** wires to the positive for next pattern.

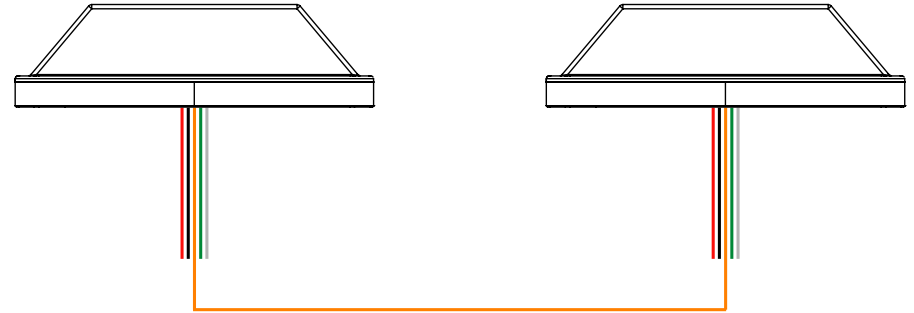

Asynchronous Flash Setting

1. Connect all the **Yellow** wires together, and touch the **Yellow** wires to the positive for 5 seconds, and then all the lights will go back to the first flash pattern and will flash in SYNC.
2. Momentarily touch the **Yellow** wires to the positive for next pattern.
3. Connect all the **Green** wires of the lights you want to be asynchronous to the positive +, and the lights will flash asynchronously.

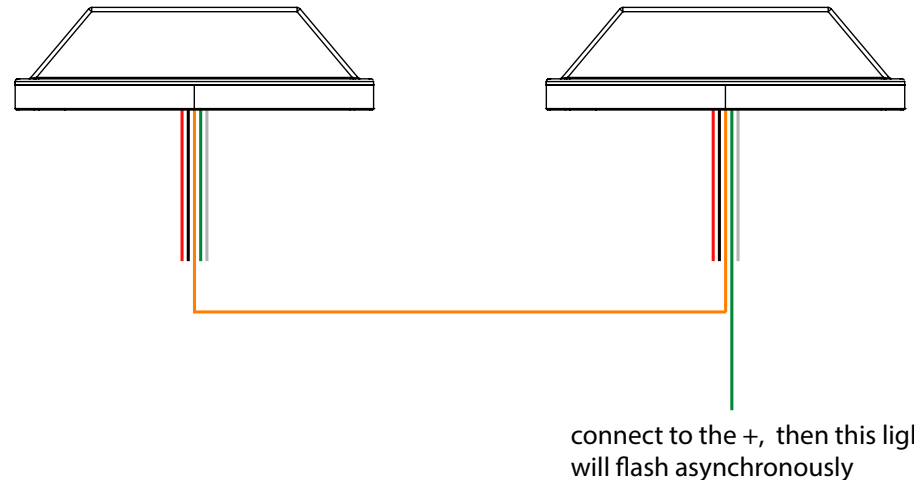

connect to the +, then this light will flash asynchronously